

## Important:

The default 24V PSU supplied with the laser is approaching its capacity. If powering other accessories from the same power source, please watch out for overloading. Symptoms include: Random Resetting and Crashing mid-cycle.